2006-08 ACCESSORIES AND EQUIPMENT

Interior Trim - Civic GX

COMPONENT LOCATION INDEX

NOTE: Refer to the INTERIOR TRIM (EXCEPT HYBRID) article for additional information that is not shown in this article.

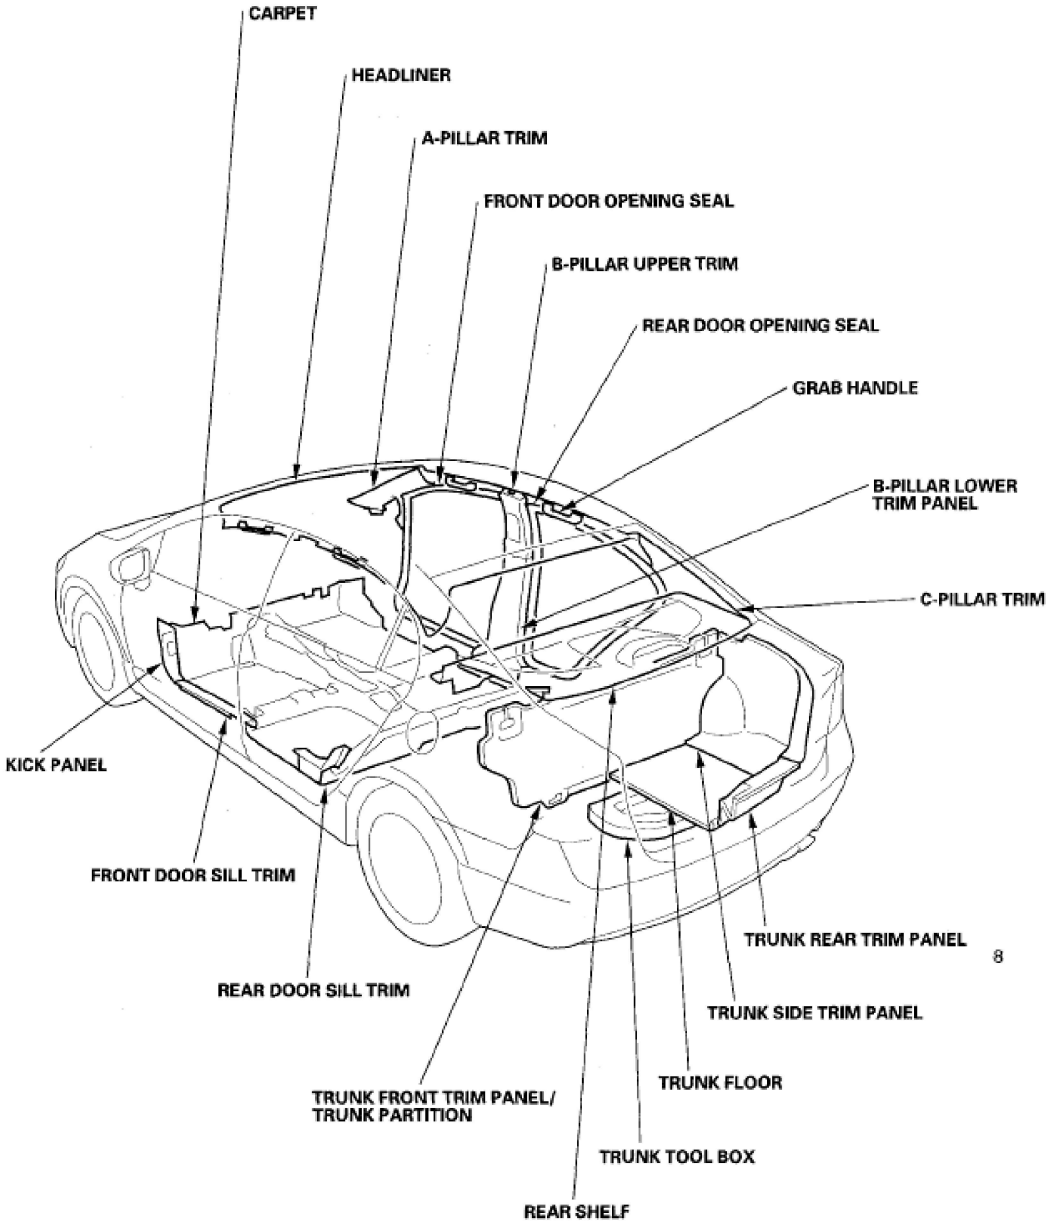

Fig. 1: Identifying Interior Trim Component Location

TRIM REMOVAL/INSTALLATION - REAR SHELF AREA

Special Tools Required

KTC trim tool set SOJATP2014 *

* Available through the American Honda Tool and Equipment Program; call 888-424-6857

SRS components are located in this area. Review the SRS component locations and the precautions and procedures, refer to the **SRS (SUPPLEMENTAL RESTRAINT SYSTEM) (EXCEPT HYBRID)** article before doing repairs or service.

NOTE:

- **Put on gloves to protect your hands.**
- **Take care not to bend or scratch the rear shelf and trim.**
- **Use the appropriate tool from the KTC trim tool set to avoid damage when prying components.**

1. Remove these items:
   - Rear seat cushion (see **REAR SEAT REMOVAL/INSTALLATION**)
   - Rear seat-back (see **REAR SEAT REMOVAL/INSTALLATION**)
   - Rear door opening seal, as needed, refer to the **REAR DOOR SILL AREA - 4-DOOR**
   - C-pillar trim, both sides, refer to the **C-PILLAR TRIM - 4-DOOR**
   - Trunk front trim panel and trunk partition (see **TRIM REMOVAL/INSTALLATION - TRUNK AREA**)
2. From the trunk compartment, disconnect the high mount brake light connector (A).

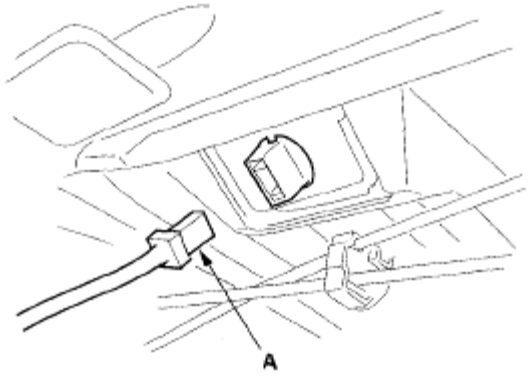

Fig. 2: Identifying High Mount Brake Light Connector

3. From the trunk compartment, release the four white clips (A) by tapping on them.

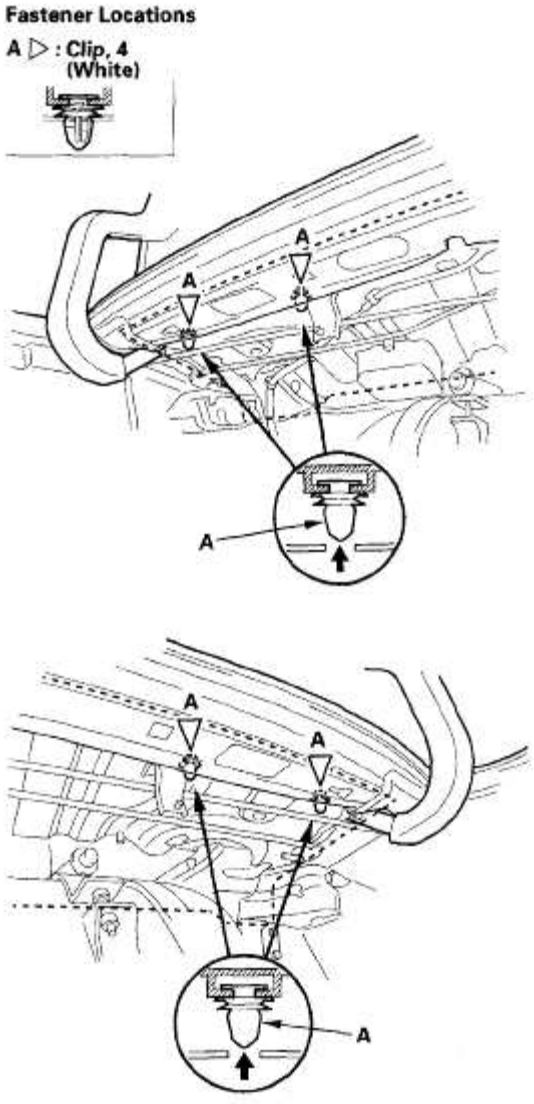

Fig. 3: Identifying Trunk Compartment Clips

4. Lift the rear shelf (A) upward to detach the remaining seven clips, and release the hook (B) and pin (C) from the holes on the body.

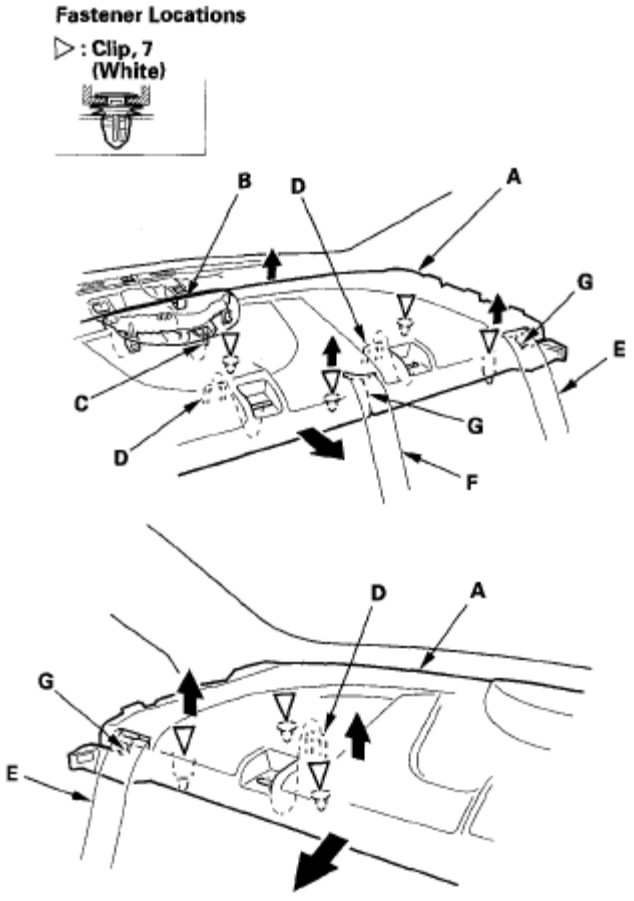

Fig. 4: Identifying Interior Trim Hook And Pin From Holes On Body

5. Release each anchor rod (D) out through the hole in the rear shelf, and pull both rear seat belts (E) and rear center seat belt (F) out through the slits (G) in the rear shelf.
6. Install the shelf in the reverse order of removal, and note these items:
   - Check if the clips are damaged or stress-whitened, and if necessary, replace them with new ones.
   - When installing the rear shelf, slip the rear seat belt through the slit and the rear center seat belt into the lid opening in the rear shelf.
   - Push the clips into place securely.
   - Make sure the high mount brake light connector is plugged in properly.

TRIM REMOVAL/INSTALLATION - TRUNK AREA

Special Tools Required

KTC trim tool set SOJATP2014 *

* Available through the American Honda Tool and Equipment Program; call 888-424-6857

NOTE:

- **Put on gloves to protect your hands.**
- **Take care not to bend or scratch the trim and panels.**
- **Use the appropriate tool from the KTC trim tool set to avoid damage when removing components.**

1. Pull the trunk floor (A) up, then remove the trunk tool box (B).

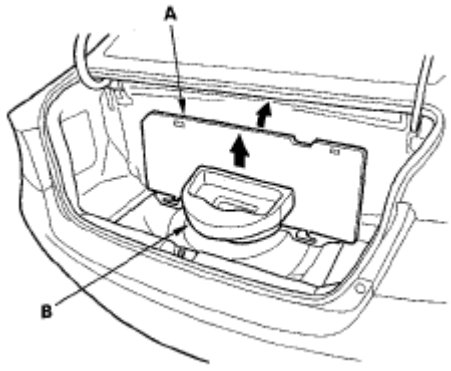

Fig. 5: Pulling Trunk Floor

2. While pushing both hooks (A) down with your hands, pull the trunk floor (B) back to release these hooks from the holes (C) in the trunk front trim panel (D), then remove the trunk floor.

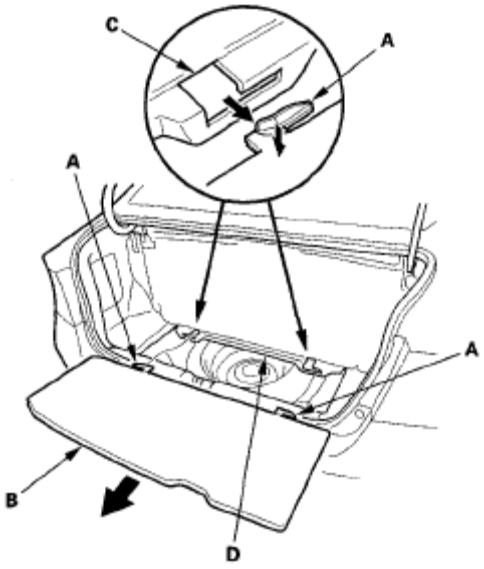

Fig. 6: Removing Trunk Floor

3. Remove the trunk lid weatherstrip near the trunk rear trim panel.
4. Detach the clips, and release the hooks (A) by pulling the trunk rear trim panel (B) up, then remove it.

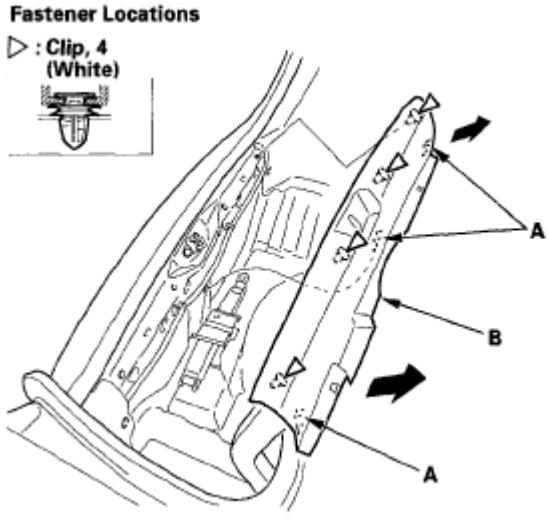

Fig. 7: Pulling Trunk Rear Trim Panel

5. Remove the clips (A) securing the trunk front trim panel (B), and using a trim tool, remove the caps (C), and remove the nuts (D) securing the trunk partition (E).

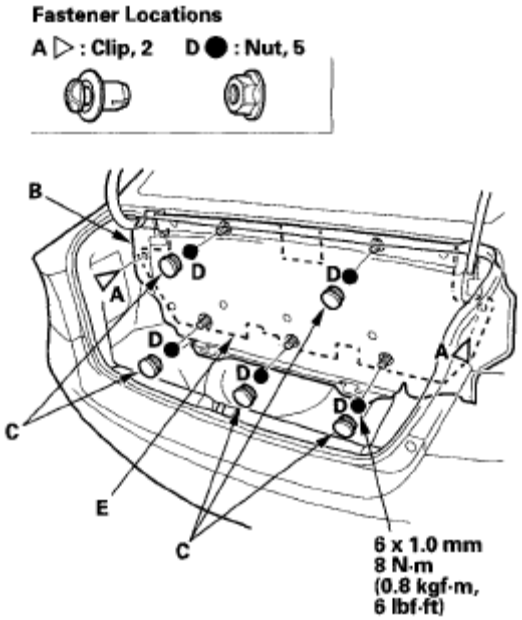

Fig. 8: Identifying Trunk Front Trim Panel And Clips

6. Fold both side edges of the trunk front trim panel (A), then remove the trunk front trim panel and trunk partition (B) as an assembly.

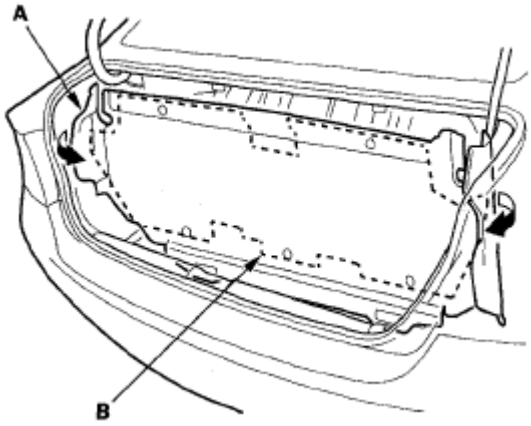

Fig. 9: Identifying Trunk Front Trim Panel And Trunk Partition Assembly

7. If necessary, remove the clips, then separate the trunk front trim panel (A) and trunk partition (B).

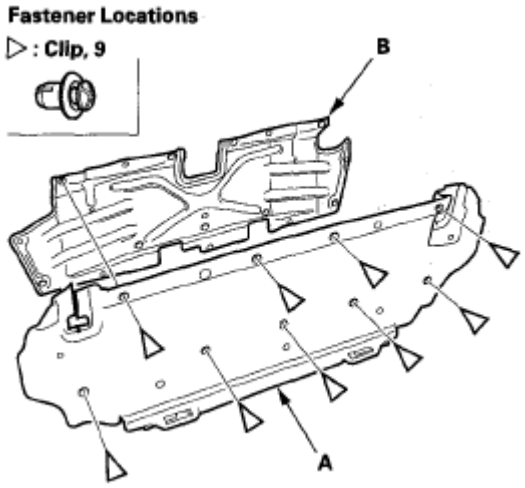

Fig. 10: Removing Clips, Trunk Front Trim Panel And Trunk Partition

8. Remove the clips, then remove the trunk side trim panel (A).

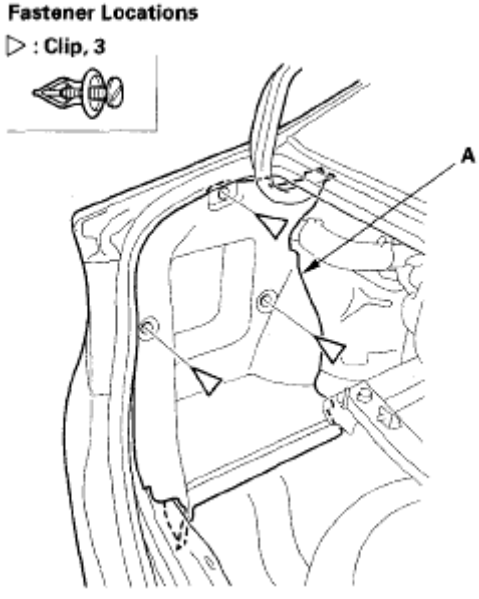

Fig. 11: Removing Trunk Side Trim Panel

9. Install the trim in the reverse order of removal, and note these items:
   - Check if the clips are damaged or stress-whitened, and if necessary, replace them with new ones.
   - Push the clips into place securely.